


StudioHub+ 4 Source Switcher - active version

The SH-4SW is an active device and must be powered via +/- 15VDC. Power flows via StudioHub+ “DC-Link” if connected to any Cat-5 cable with +/- 15VDC active on Pins 7&8. Or, utilize optional power supply is part # PS-WWUSH.

Input selects will be maintained in the event of a power failure.

Input select switches may be remote controlled via pins on connector J4.

The unit is fully bidirectional and may switch 4 inputs to 1 output or 1 input to 4 outputs

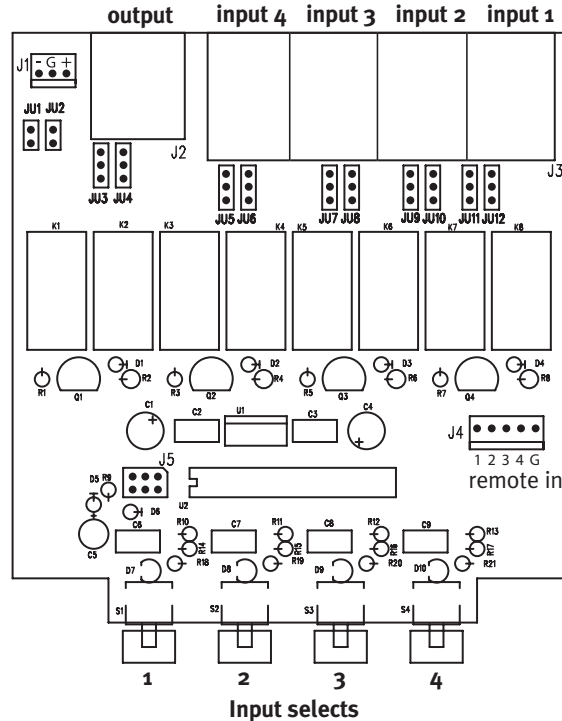

Remote Connector:

Momentarily connect input pins 1 to 4 to ground pin to remotely activate corresponding switching function.

J5 – Push Button Latching/Momentary Operation

Insert jumper between 5-3 for momentary mode (factory default).

Insert jumper between 3-1 for latching mode (Note- power must be cycled for mode change)



Momentary (5-3)



Latching (3-1)

Shielding Jumpers:

JU1 – insert to connect power ground to chassis ground

JU2 – insert to connect power ground to shield

Mono Jumpers:

Notes to make inputs mono:

Mono function applies left channel to both left and right. Move both jumpers together to set mono for any input.

JU12/JU11 – connect forward pins to mono input 1

JU10/JU9 – connect forward pins to mono input 2

JU8/JU7 – connect forward pins to mono input 3

JU6/JU5 – connect forward pins to mono input 4

Set for Stereo



Set for Mono

