


Illustration B-1 - v6*

SIX CHANNEL CONTROL BOARD JUMPER SETTINGS FOR ANALOG MODEL CONSOLES

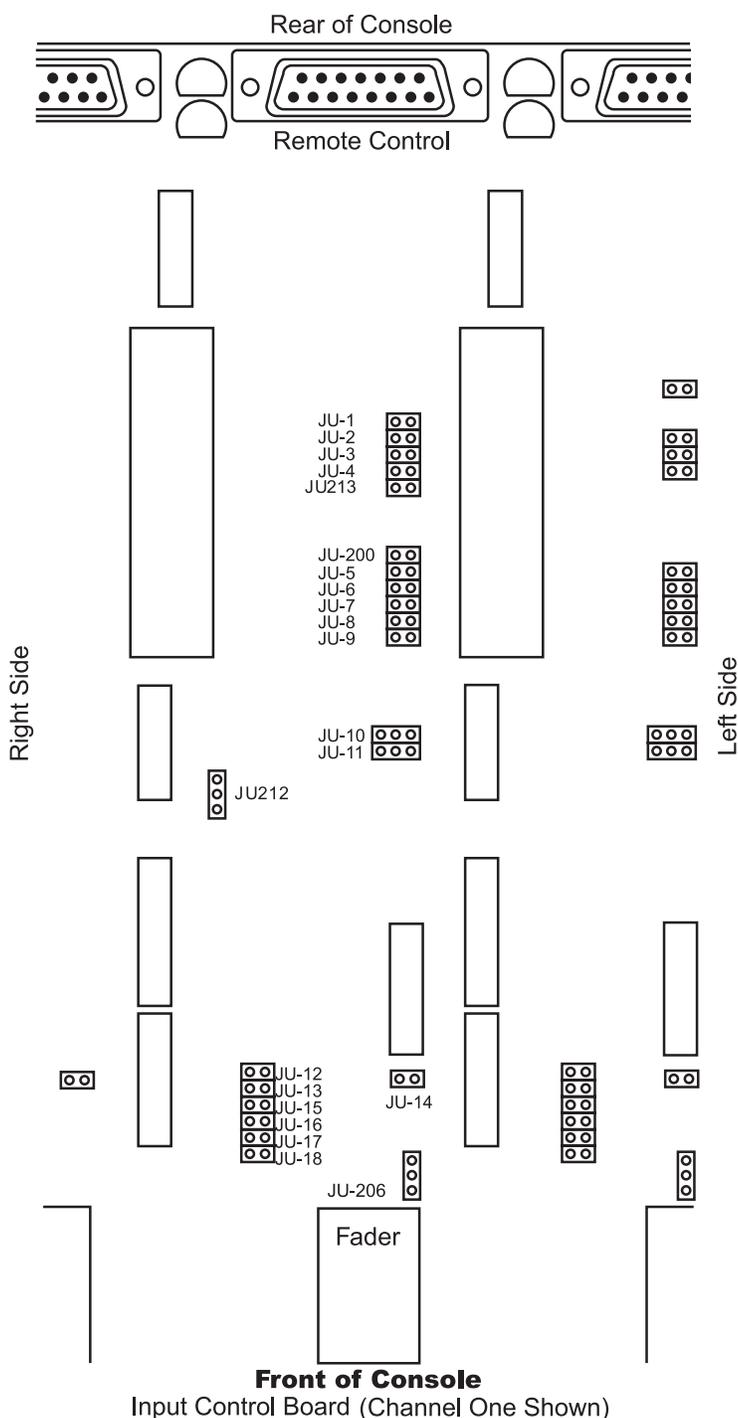

Channel Logic Jumpers

- JU-1 Install for fader start (special order fader required).
- JU-2 Install for remote B start and stop commands to control the remote outputs.
- JU-3 Install for input B to hold and remove for input B to pulse the remote pulse/hold outputs.
- JU-4 Install for remote A start and stop commands to control the remote pulse/hold outputs.
- JU-200 Install to disengage cue when channel is turned on.
- JU-5* Install for input A to hold and remove for input A to pulse the remote pulse/hold outputs.
- JU-6* Install for cue to follow the on/off mode.
- JU-7* Install for cue on fader detent (special order fader required).
- JU-8* Install for no cue in input B (cue switch is now cough for input B).
- JU-9* Install for no cue in input A (cue switch is now cough for input A).
- JU-10* **Input A stop lamp local/remote jumper.**
Jump left and middle pins for local console lamp control.
(Jump right and middle pins for remote lamp control.)
- JU-11 **Input B stop lamp local/remote jumper. Jump left and middle pins for local console lamp control.**
(Jump right and middle pins remote lamp control.)
- JU-12 Install for input A mute 2.
- JU-13 Install for input B mute 2.
- JU-14* **Install for "Cue Exclusive" (turn off mix buses when in cue mode.)**
- JU-15 Install for timer reset with input A.
- JU-16 Install for input A mute 1.
- JU-17 Install for timer reset with input B.
- JU-18 Install for input B mute 1.
- JU-206 Jumper must be installed between lower two pins for analog console operation.
- JU-212 **Jumper must be installed between lower two pins for cue buss normal operation.**
- JU-213 **Do not install - future feature use.**

Notes:

Items in bold are factory default jumper settings.
See following page for remote control connector pin-outs.
Consult this section for a detailed explanation of control programming and functions.
*Cue Options - Consult manual section 2.2.5 and 2.2.6 for various cue modes and operational descriptions.

*Applies to Consoles shipped after September 06 with Millennium 6 channel control board p/n 10881 vE